


BRONZE FLEX CONNECTOR INSTALLATION INSTRUCTIONS

General Installation Instructions

1. Clean each end using steel wool and brushes.
Brazing and soldering flux must be removed immediately after installation.
2. Wrap base of fitting and 1 ½" down the braid with a wet cloth to dissipate heat during sweating of the assembly to system.
3. Direct all heat away from the base of fitting and hose/braid.
Avoid any open flame contact to this area as well.

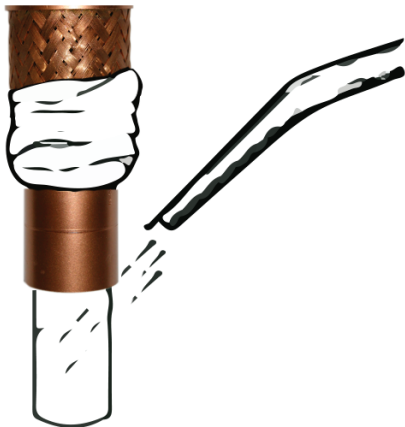

4. Use silver solder to connect the assembly to the system.
DO NOT use brazing rod or other higher temperature methods.

5. Remove wet cloth and all other installation products after assembly is installed.

NOTE: When working with stainless steel hose and copper sweats, the assembly must have 100% chloride free flux and must be cleaned thoroughly after each installation.